

ARMABOT


Cut Down VersaPlanetary Output Shaft

Simple Swerve P/N A0061 **Modified Parts**

Modify AndyMark Bracket

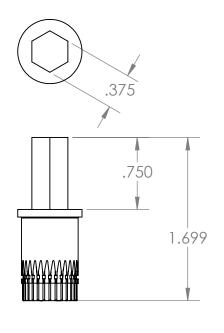

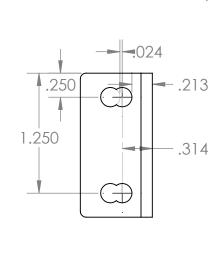


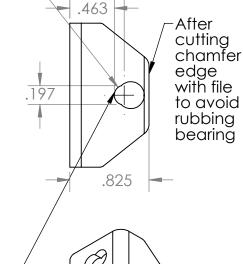

.566


Hole enlargement is for clearance only and can be filed out, or milled with 1/4 inch end mill-

Drill new holes in 32T sprocket

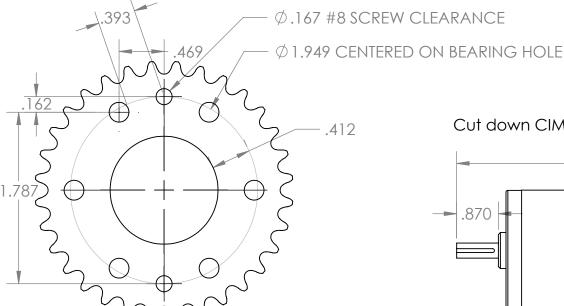

Ø.167 #8 SCREW CLEARANCE

Cut down CIM shaft

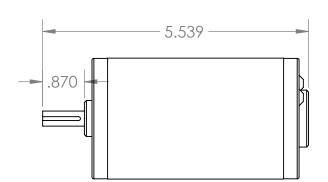

One method of cutting the CIM shaft that works is to place the motor in a vise and power it so the shaft spins, then cut it with an abrasive blade spinning the opposite direction.